



KOTZUR

FOOTING AND SITE PREPARATION FOR TRANSPORTABLE SILOS



A family owned Australian business



This document has been created to provide information and instruction on the correct way to prepare footings and the site for the installation of silo/s.

These requirements relate to all 'transportable' silos:

- Delivered to site
- Relocated on/off site

When laying footings for your silos it is imperative that the instructions outlined below are followed.

Failure to follow these instructions could mean that your silo will not be unloaded. It would then be returned to its pick up location at your cost, and not our factory. Further costs would then be applied to the delivery of the silo to site when the situation has been rectified.

REQUIREMENTS

1 Footings cannot be raised more than 75mm (3 inches) from ground level.

If footings are raised a gradual road base or gravel ramp is required to allow safe access for unloading.



2. Access to the pads **MUST** be clear from all items/obstructions.



3. Truck and Trailer access

- The truck and trailer **MUST** be able to reverse parallel to the footings with at least 25 metres of clear space between the pad and any other structures e.g. trees, sheds, buildings etc.
- Access to the site needs to be as smooth as possible.

Note: Truck and slab access must all be on a flat level surface.

In the event of 'wet' weather, the ground must be firm around the silo pad.

If you are in doubt about the suitability of your site, please advise Kotzur 14 days prior to the expected delivery date